

# Pinewood Derby Car Stand


Working with Wood

Pack 479

December 19, 2002




# Step 0: Assemble Parts

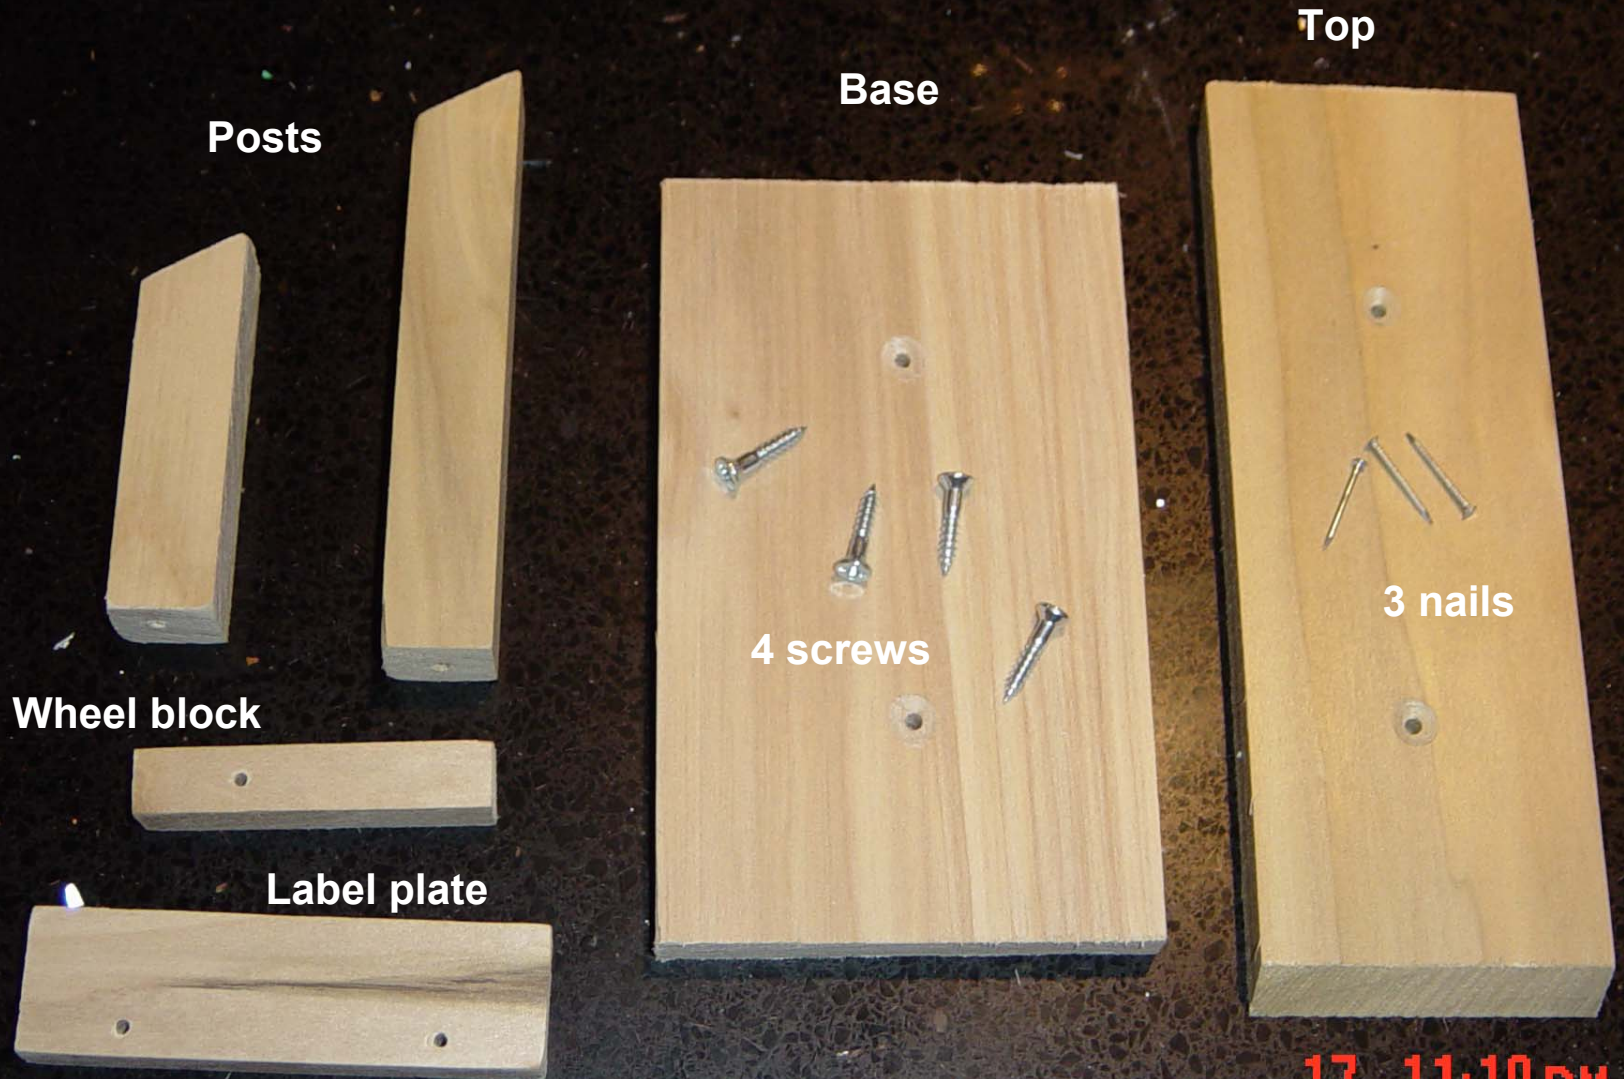

17 11:19 PM

# Step 1: Attach Wheel Block

- Install Wheel block behind screw hole if long part of the car is in the front.
- Install Wheel block in front of screw hole if long part of the car is in the back

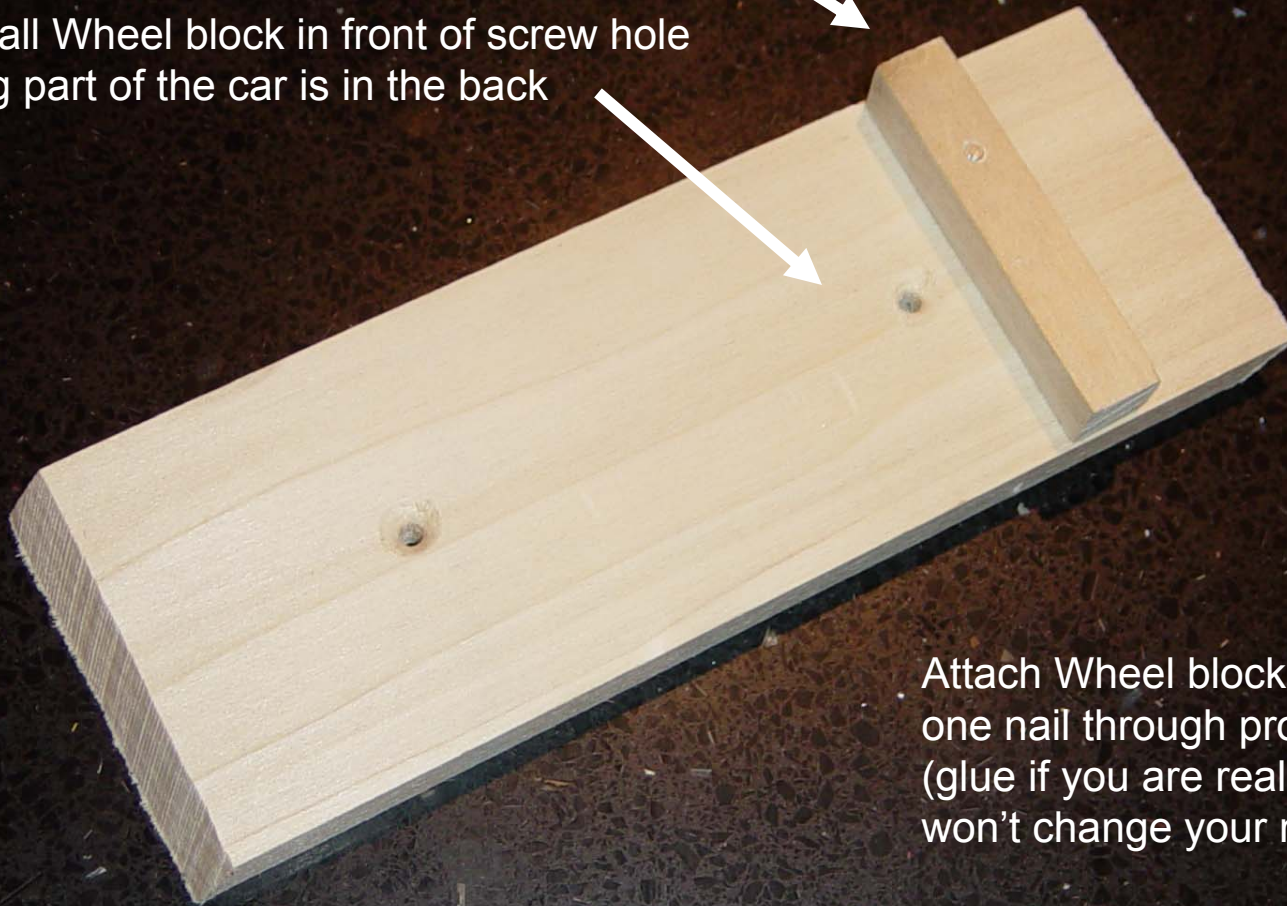


Attach Wheel block to top using one nail through provided hole (glue if you are really sure you won't change your mind).

## Step 2: Attach Label Plate to Base

Attach Label Plate to front of base using two nails through provided holes. (Make sure it is attached to the front).




# Step 3: Insert Screws through Base

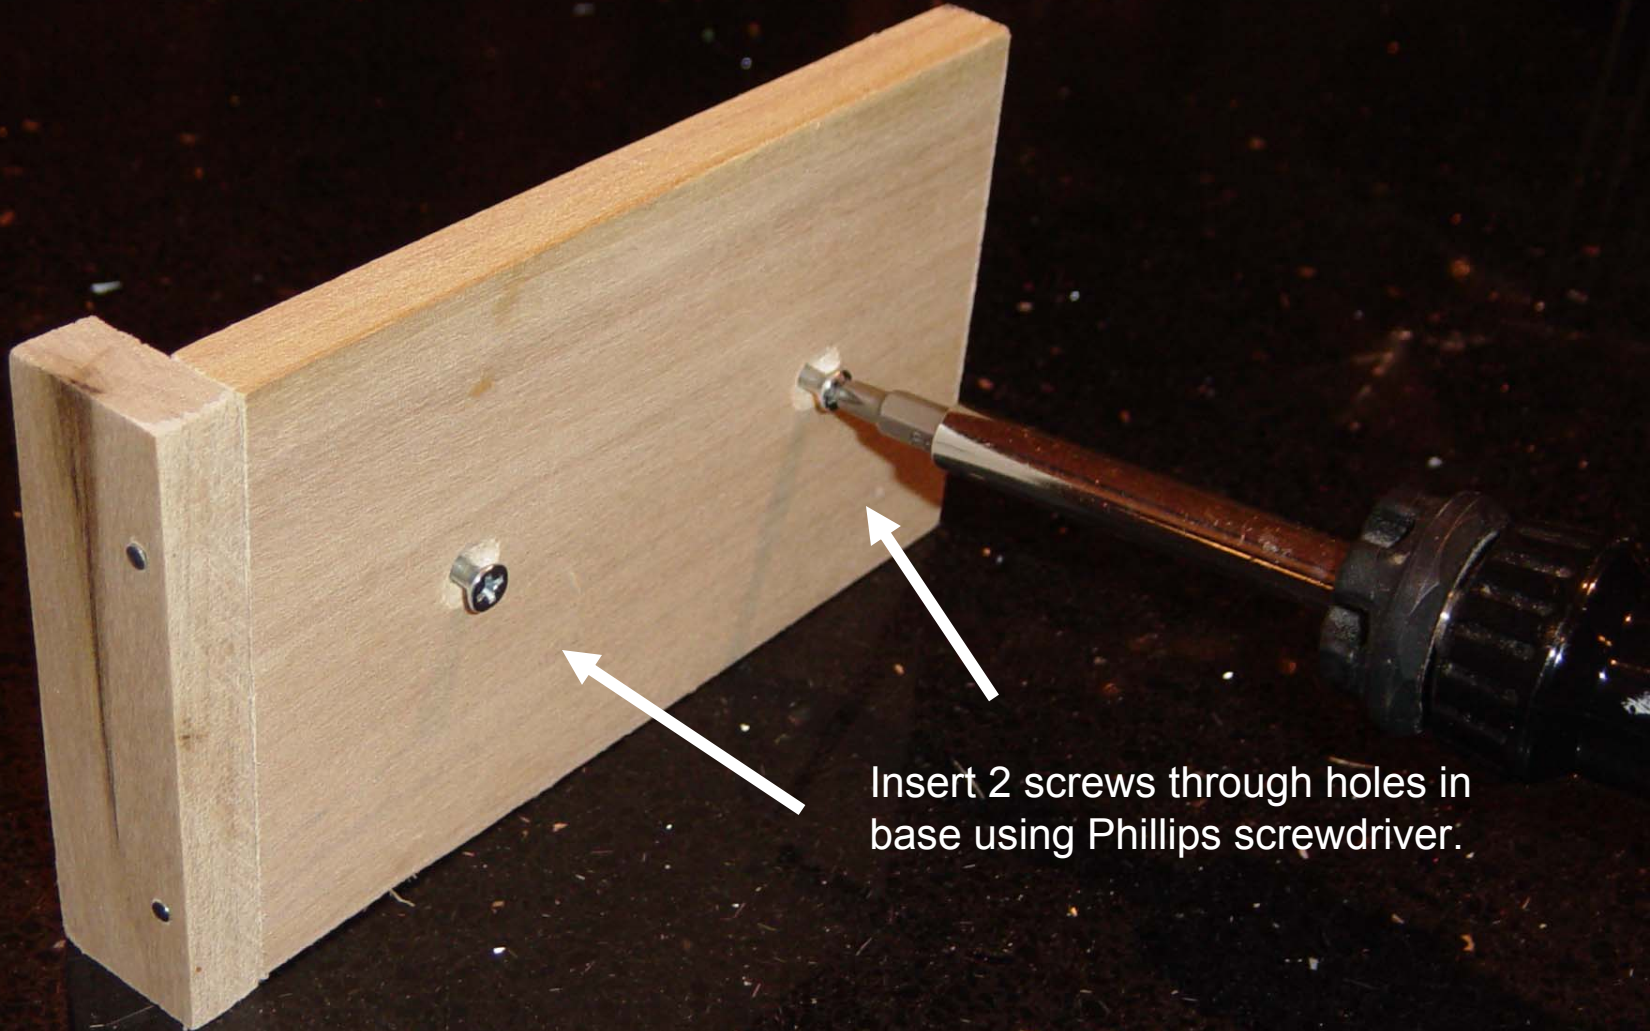


Insert 2 screws through holes in base using Phillips screwdriver.

# Step 3a: Screw Posts to Base

Attach posts to base using two screws. You may choose to glue the posts for extra strength. Do not over tighten the screws.

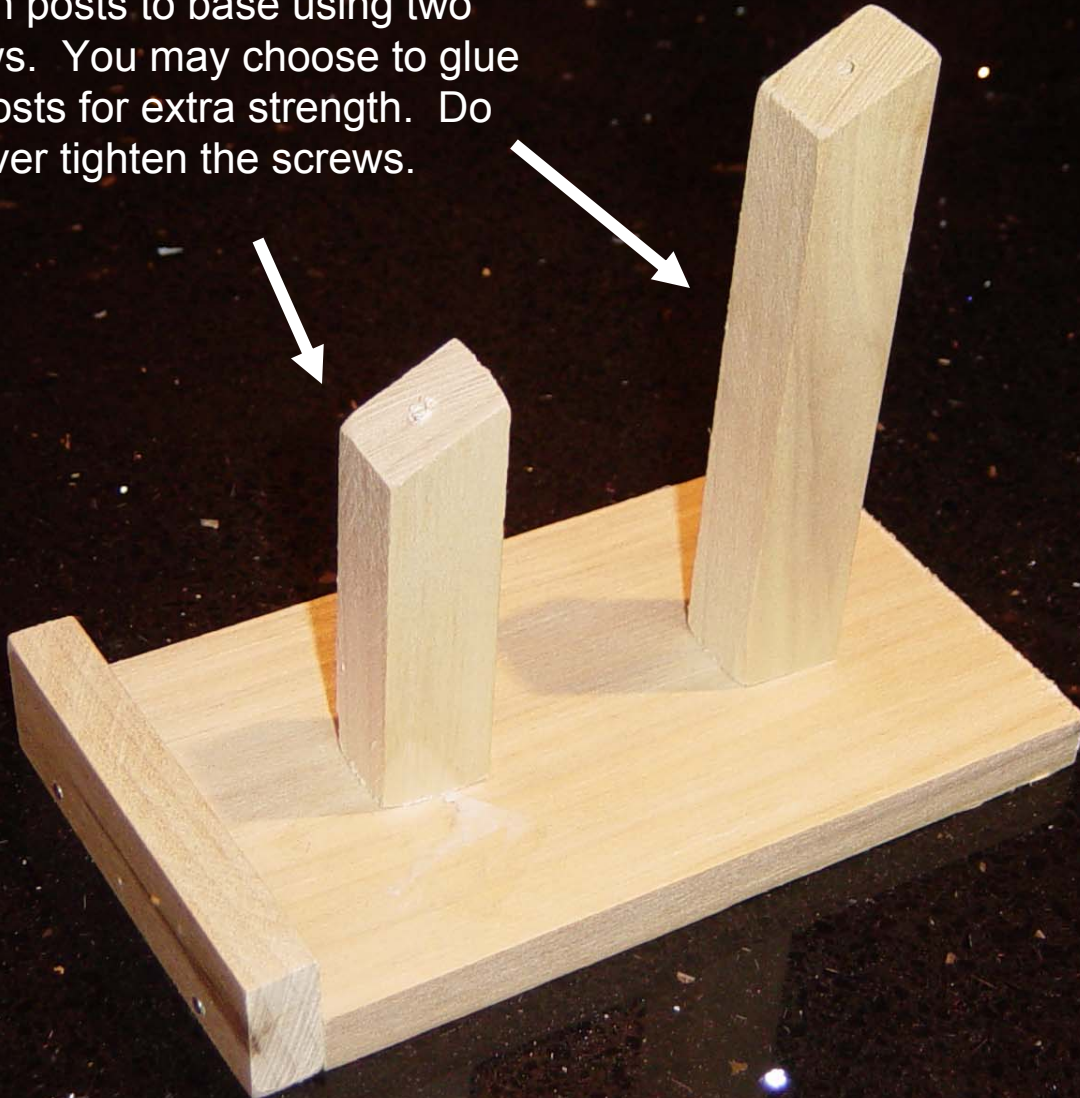

# Step 4: Insert Screws through Top

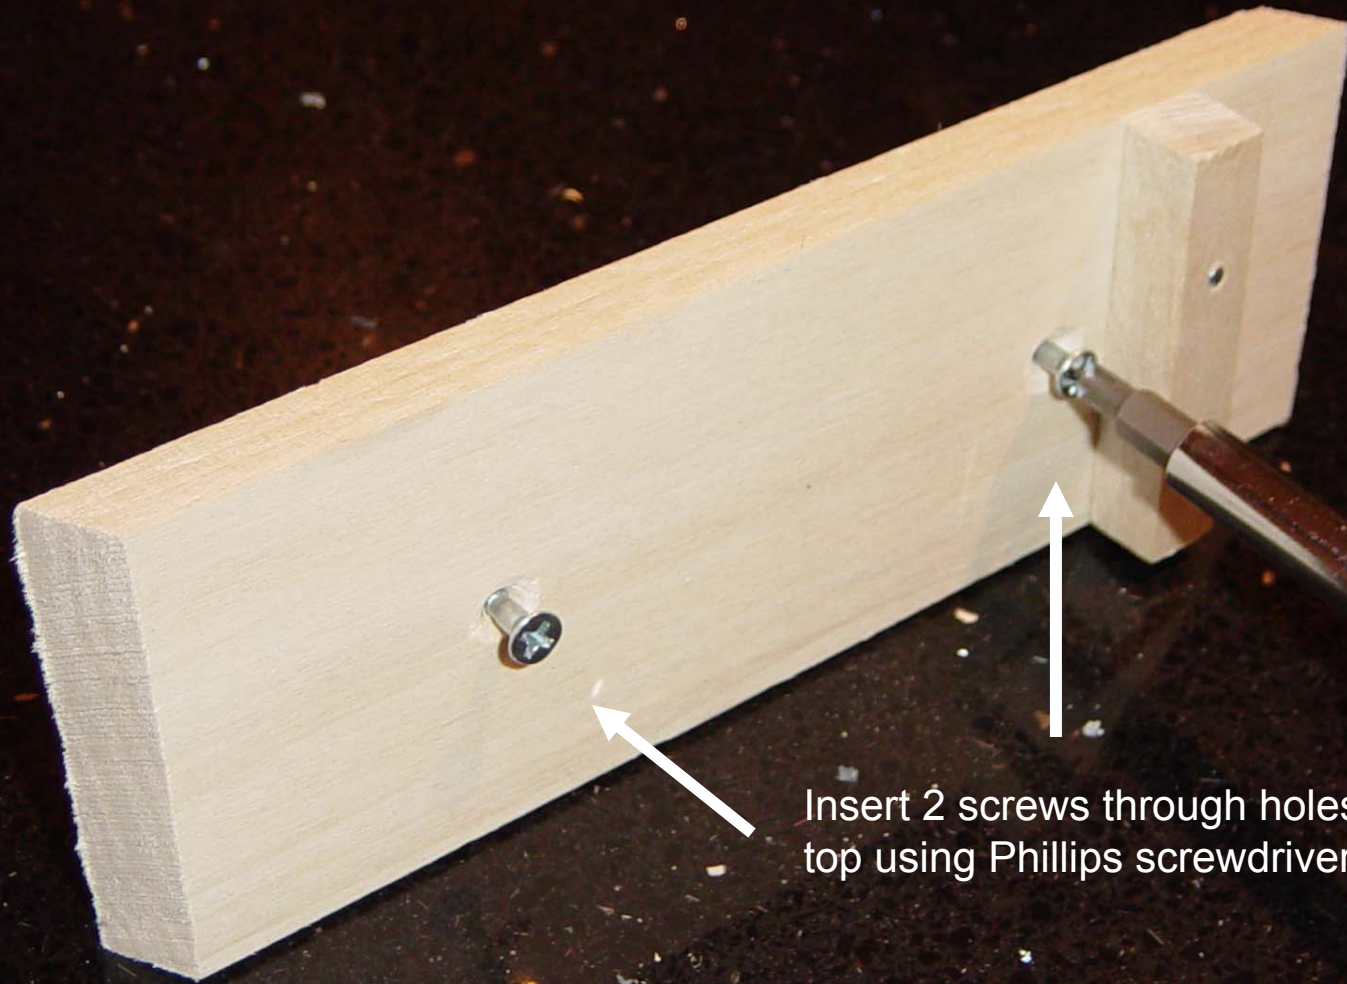

Insert 2 screws through holes in top using Phillips screwdriver.

# Step 4a: Screw Posts to Top

Attach posts to top using two screws. You may choose to glue the posts for extra strength. Do not over tighten the screws.



17 11:26 PM

# Step 5: Install a Pinewood Derby Car



Congratulations! Your car stand is now complete. Sand the edges and stain or paint to your own liking.

17 11:27 PM